

VISIONS 3000 NAMING ZONES

LINUX 2.52



Naming Zones



You can Name Zones from the **setup dialog**.

To edit Names, you must first be logged in as the supervisor

Supervisor

test.efi



29/04/2013

15:53:18


Accessing the Zone Names Page

From the home screen or the main run-screen, in monitor-mode or run-mode, press the setup button, then the "General Settings" icon, then the "More" icon, then the "Zone Names" icon.



This takes you to the Zone Names Page.

You can name individual zones or groups of zones and you can give zone names an index number. You can also import the names from a text file on an attached USB drive. Changes made to zone names affect the current setup.

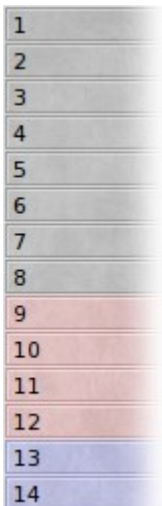

This image shows a controller which has 8 cavities (grey), 4 manifolds (pink) and 2 water-zones (blue).

This is how the Zone Names Page appears if the controller has no names allocated for any of its zones.

Zone names are a good way to identify zones. If a zone does not have a name, the controller will always display the zone number.

VISIONS 3000 NAMING ZONES

LINUX 2.52



Edit Name

This function can only be accessed by the Supervisor.

Press this button to edit the name of a single zone. You will be asked to enter the zone number of the zone you want to edit.

Enter some text using the on-screen touch keyboard.



Global Names

This function can only be accessed by the Supervisor.

Press this button to edit the names of multiple zones. You will be asked to enter the zone number of the first zone you want to edit, followed by the zone number of the last zone you want to change.

Enter some text using the on-screen touch keyboard.

The same text is entered as the name for all of the zones you selected.

Choose the first zone (1-13)

Zone:

Escape Del Clear

7	8	9
4	5	6
1	2	3
0	Enter	

Choose the last zone (2-14)

Zone:

Escape Del Clear

7	8	9
4	5	6
1	2	3
0	Enter	

- 1 Cavity
- 2 Cavity
- 3 Cavity
- 4 Cavity
- 5 Cavity
- 6 Cavity
- 7 Cavity
- 8 Cavity
- 9
- 10
- 11
- 12
- 13
- 14



Add Index


This function can only be accessed by the Supervisor.

Press this button to add a symbol / index number combination to multiple zones. You will be asked to enter the zone number of the first zone you want to edit, followed by the zone number of the last zone you want to change. Then you will be asked for the first index value and the separator symbol to use.

The same separator symbol is added to the names of all the zones you selected, but the index number increments by one per zone

VISIONS 3000 NAMING ZONES

LINUX 2.52

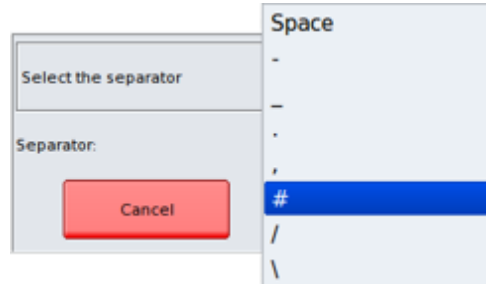

1	Cavity#1
2	Cavity#2
3	Cavity#3
4	Cavity#4
5	Cavity#5
6	Cavity#6
7	Cavity#7
8	Cavity#8
9	
10	
11	
12	
13	
14	


The index is added to the names of the zones; it is not stored separately and cannot be undone.

Import Names

This function can only be accessed by the Supervisor.

This is probably the easiest way to edit and change names, especially when the naming scheme is quite complicated.

Prepare a simple text file on a desktop computer, save the file to a USB drive and insert the USB drive into the top-box USB port on the controller. Then select this option.



Each line of the name file should contain the zone name.

One zone name per line.

This is an example name file prepared on a PC for an 8 cavity, 4 manifold, 2 water-zone controller

International Temperature Control Inc.

2415 E. Huron—P.O. Box 805

Au Gres, MI 48703 USA

Tel: (989) 876-8075

Fax: (989) 876-6640

E-Mail: sales@itc-controls.com

Internet: www.itc-controls.com

